



SPI Twin Plug Adaption (Early and 97-onwards)

If you have an SPI with a twin-plug Rover MEMS ECU you will need to adapt the two plugs to fit our single plug connector.

Early Cars (pre 97) –

The smaller plug of the 2 is for the lambda sensor.

Small plug wires need to be moved to the following pins on the large plug:

- Green – move to pin 18 on large plug.
- Grey – move to pin 7 on large plug.
- Black – move to pin 29 on large plug.




Later cars (1997-onwards) –

The later cars use a small plug for one of the ignition coils in the wasted spark coil.

The following wire needs to be moved from the small plug to the large plug.

White and blue - pin 11 on large plug.

The 2 black wires can be left as they are not required.

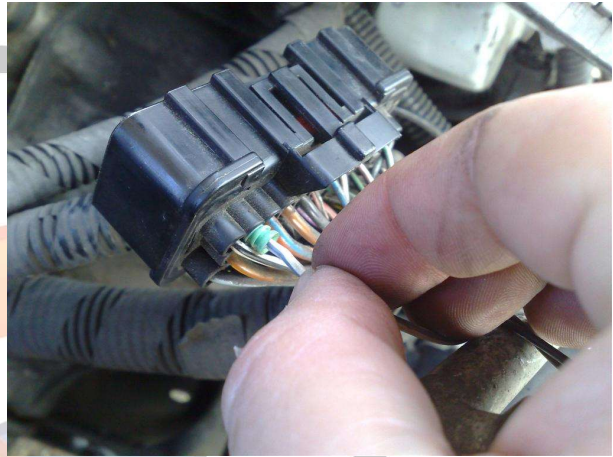

+44(0) 1953 859785

info@specialist-components.co.uk

www.specialist-components.co.uk

Specialist Components
Unit 5, Northfield Mill
Poynt Close
Wymondham
Norfolk
NR18 0UB